
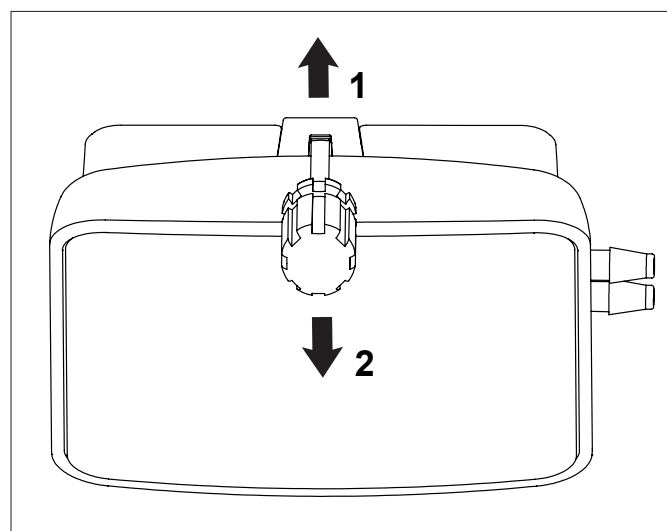
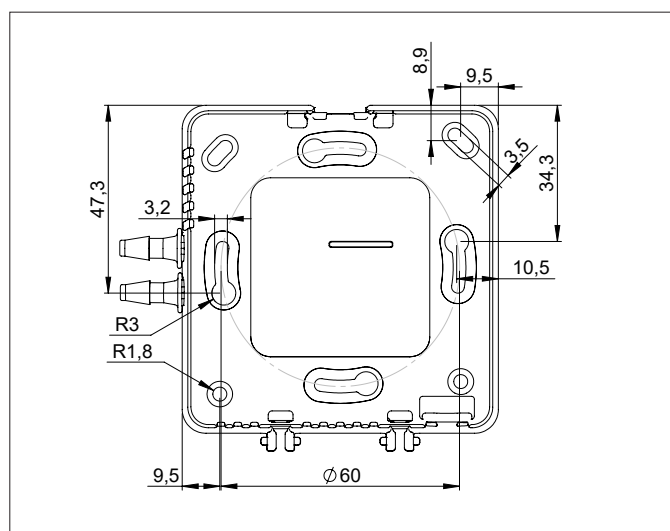



Wireless temperature, humidity and pressure difference sensor

Installation sheet

OMA0587

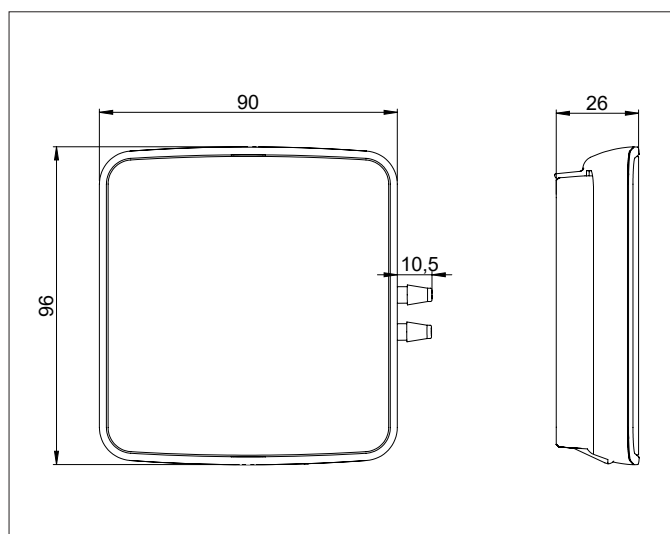

To the junction box

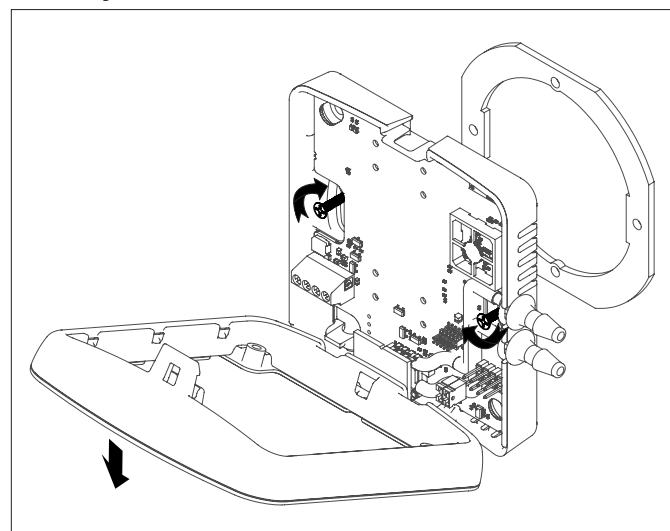

To the wall

